

MonoFit® retrofitting guide.

## Guide to replace Vivreu C-Tap with MonoFit®

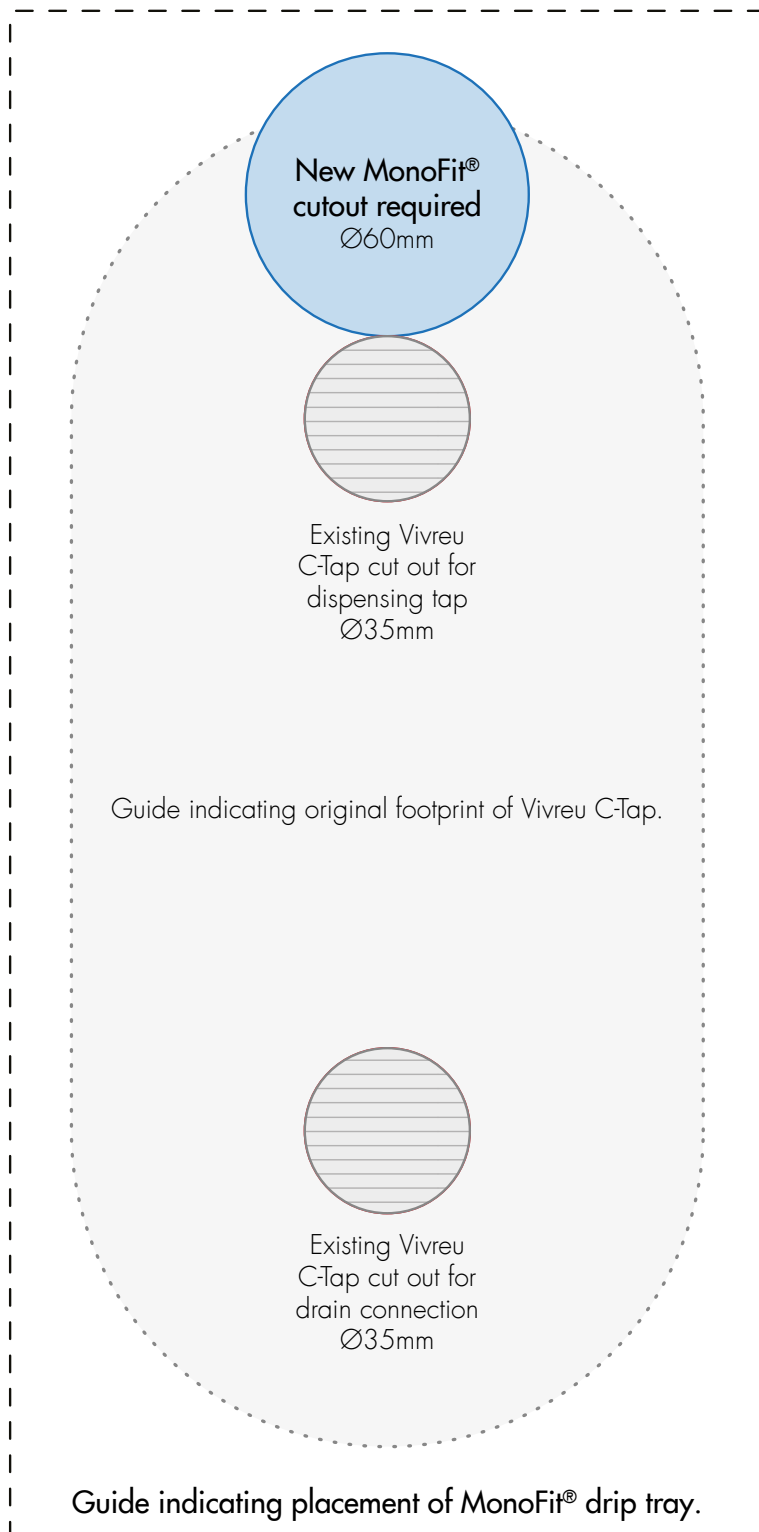


Diagram not to scale.

### Replacing a Vivreu C-Tap with a T3 or T2 MonoFit® tap.

A MonoFit® drip tray will allow for easy installation of a T3 or T2 tap system in place of a previously installed Vivreu C-Tap. A single 60mm diameter circular hole will need to be drilled as indicated in the diagram. The MonoFit® tray will cover the pre-existing holes within the counter top for a finished, tidy appearance.

#### Before: Vivreu C-Tap



#### After: T2 MonoFit® or T3 MonoFit®



T-series Integrated Tap Retrofitting Kit  
Stainless Steel - 720890

T-Series Integrated Tap Retrofitting Kit  
Black - 720895

## MonoFit® retrofitting guide.

### Guide to replace Vivreu Vi with MonoFit®

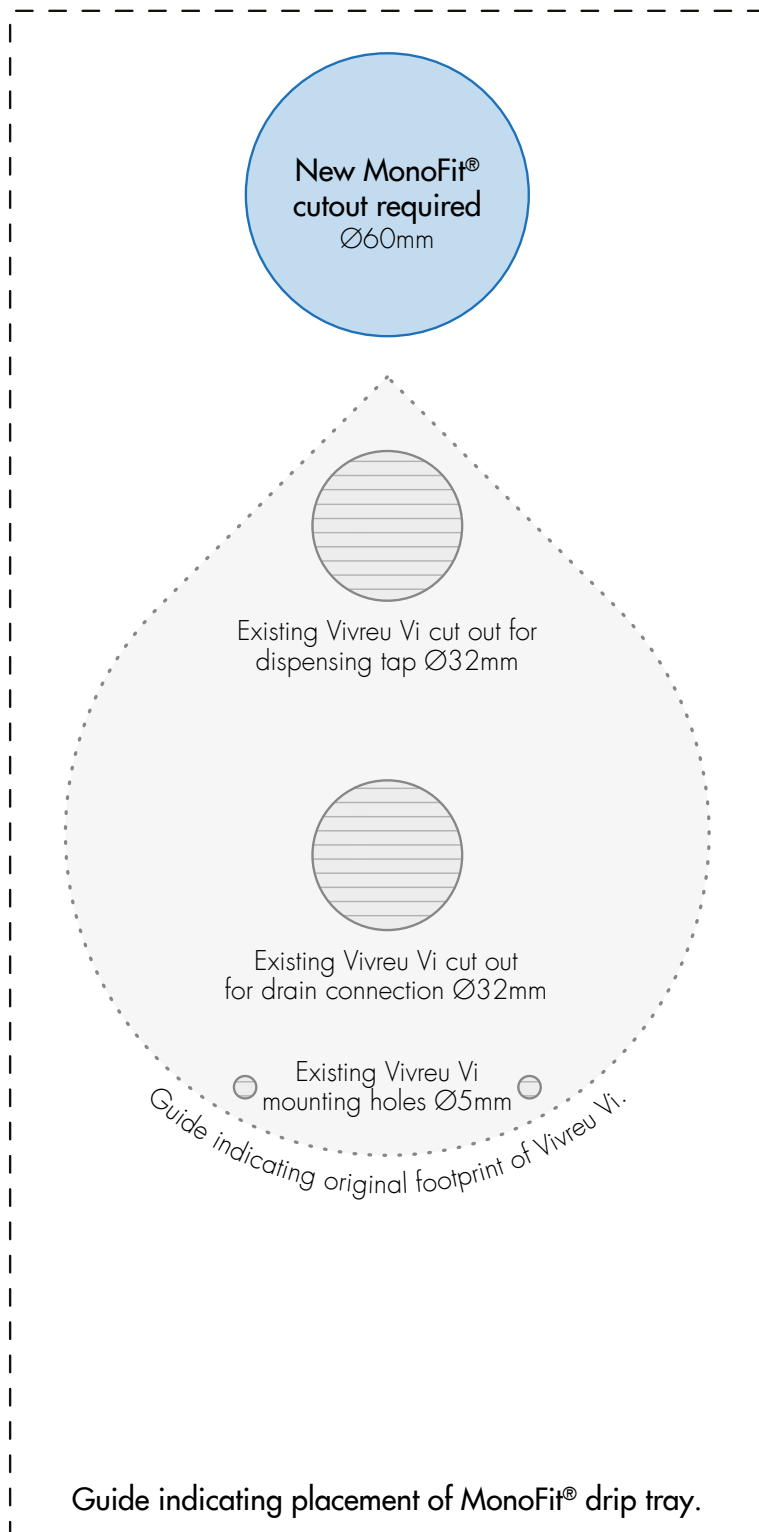


Diagram not to scale.

#### Replacing a Vivreu Vi with a T3 or T2 MonoFit® tap.

A MonoFit® drip tray will allow for easy installation of a T3 or T2 tap system in place of a previously installed Vivreu Vi Tap. A single 60mm diameter circular hole will need to be drilled as indicated in the diagram. The MonoFit® tray will cover the pre-existing holes within the counter top for a finished, tidy appearance.

#### Before: Vivreu Vi



#### After: T2 MonoFit® or T3 MonoFit®



MonoFit® retrofitting guide.

## Guide to replace Vivreu I-Tap with MonoFit®

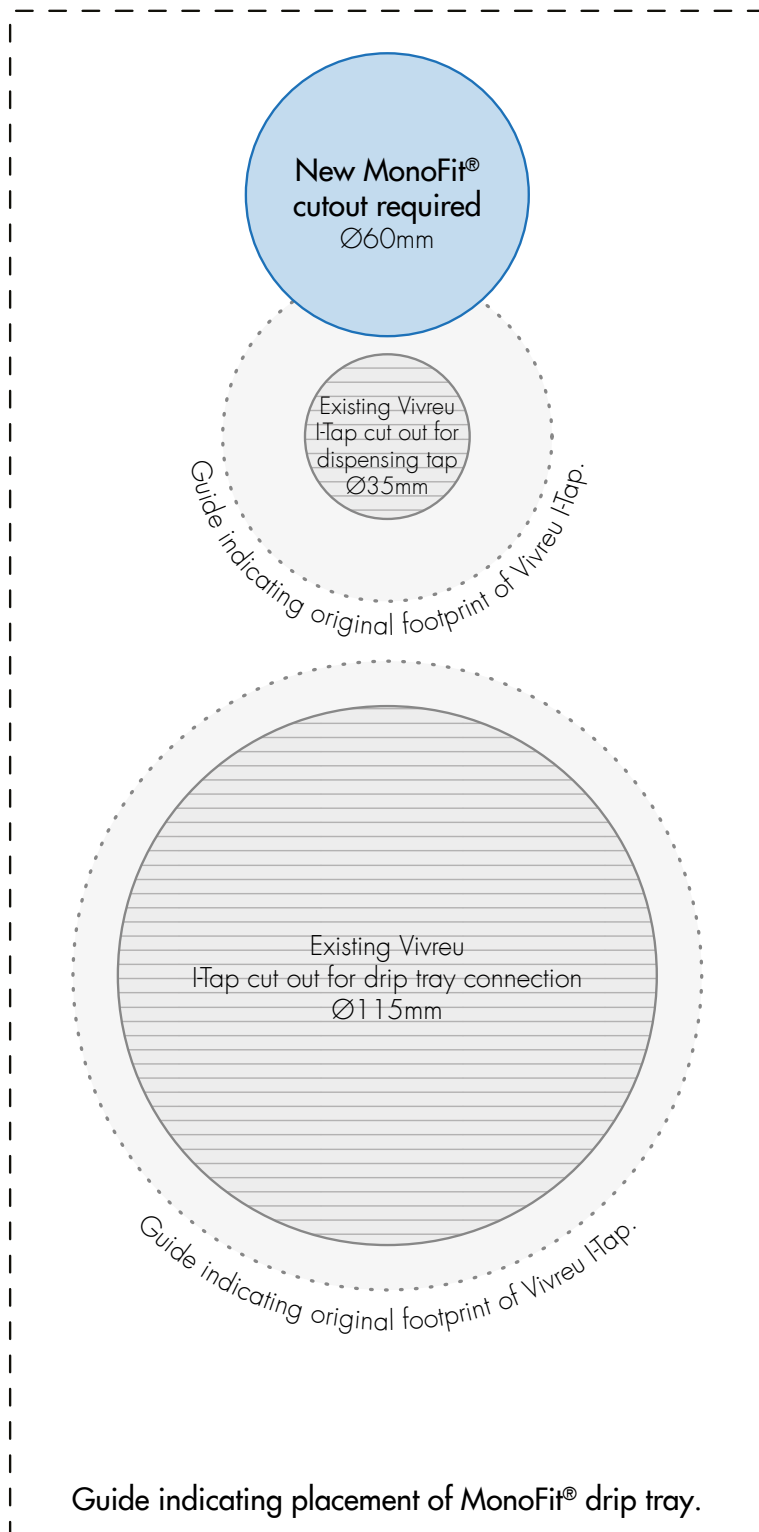


Diagram not to scale.

### Replacing a Vivreu I-Tap with a T3 or T2 MonoFit® tap.

A MonoFit® drip tray will allow for easy installation of a T3 or T2 tap system in place of a previously installed Vivreu I-Tap. A single 60mm diameter circular hole will need to be drilled as indicated in the diagram. The MonoFit® tray will cover the pre-existing holes within the counter top for a finished, tidy appearance.

Before: Vivreu I-Tap



After: T2 MonoFit® or T3 MonoFit®



MonoFit® retrofitting guide.

## Guide to replace Zip G4 with MonoFit®

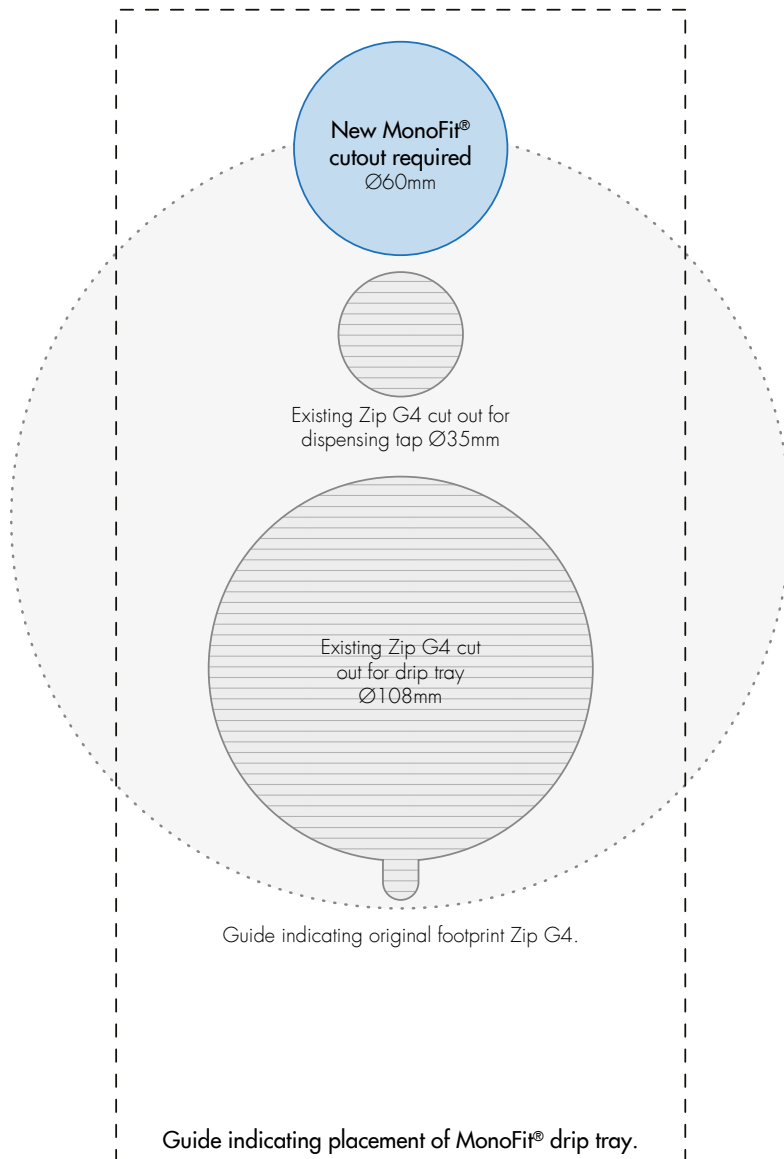


Diagram not to scale.

### Replacing a Zip G4 with a T3 or T2 MonoFit® tap.

A MonoFit® drip tray will allow for easy installation of a T3 or T2 tap system in place of a previously installed Zip G4. A single 60mm diameter circular hole will need to be drilled as indicated in the diagram. The MonoFit® tray will cover the pre-existing holes within the counter top for a finished, tidy appearance.

#### Before: Zip G4



#### After: T2 MonoFit® or T3 MonoFit®



MonoFit® retrofitting guide.

## Guide to replace Zip G5 with MonoFit®

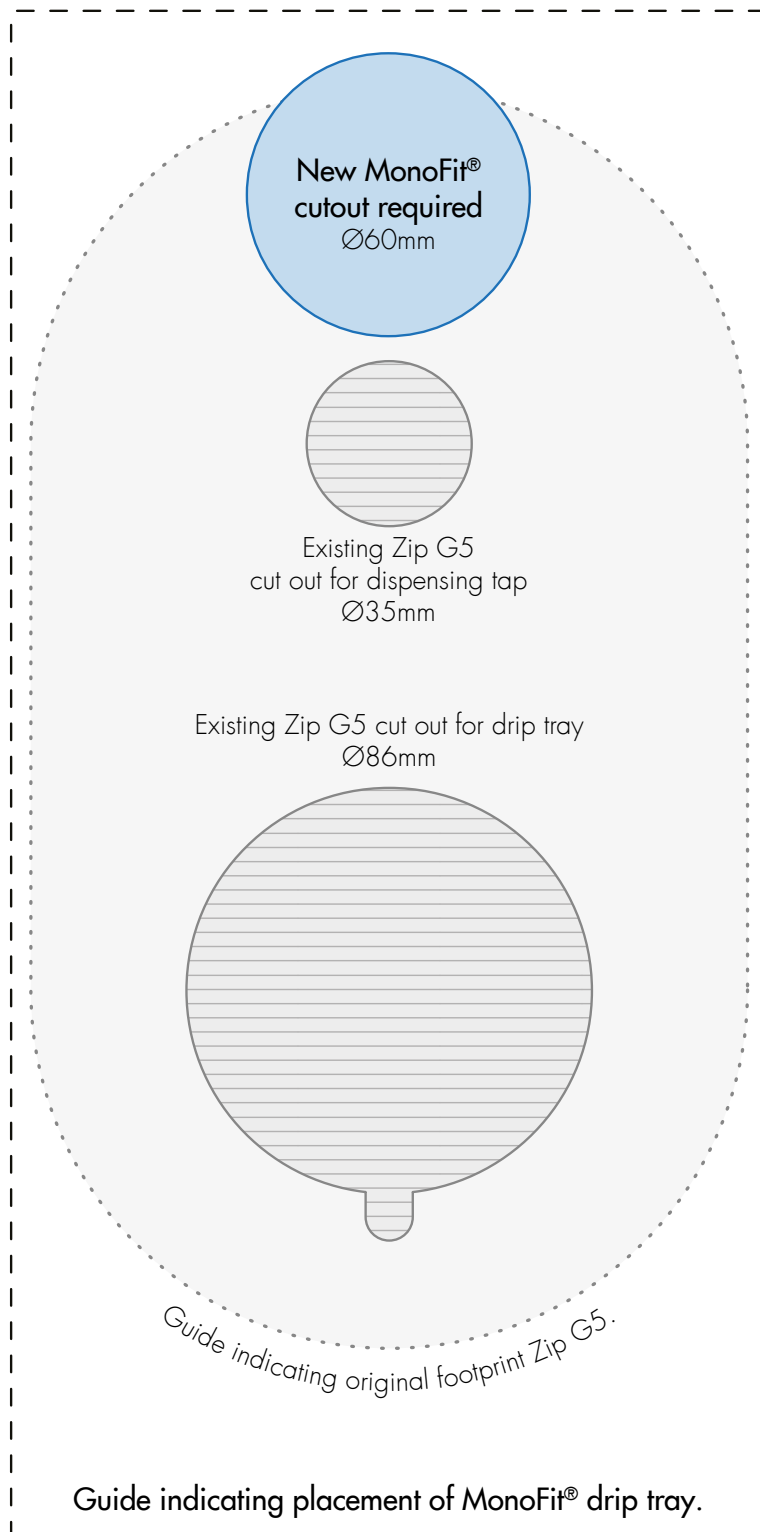


Diagram not to scale.

### Replacing a Zip G5 with a T3 or T2 MonoFit® tap.

A MonoFit® drip tray will allow for easy installation of a T3 or T2 tap system in place of a previously installed Zip G5. A single 60mm diameter circular hole will need to be drilled as indicated in the diagram. The MonoFit® tray will cover the pre-existing holes within the counter top for a finished, tidy appearance.

Before: Zip G5



After: T2 MonoFit® or T3 MonoFit®



MonoFit® retrofitting guide.

## Guide to replace Billi with MonoFit® and Integrated Tap Retrofitting Plate

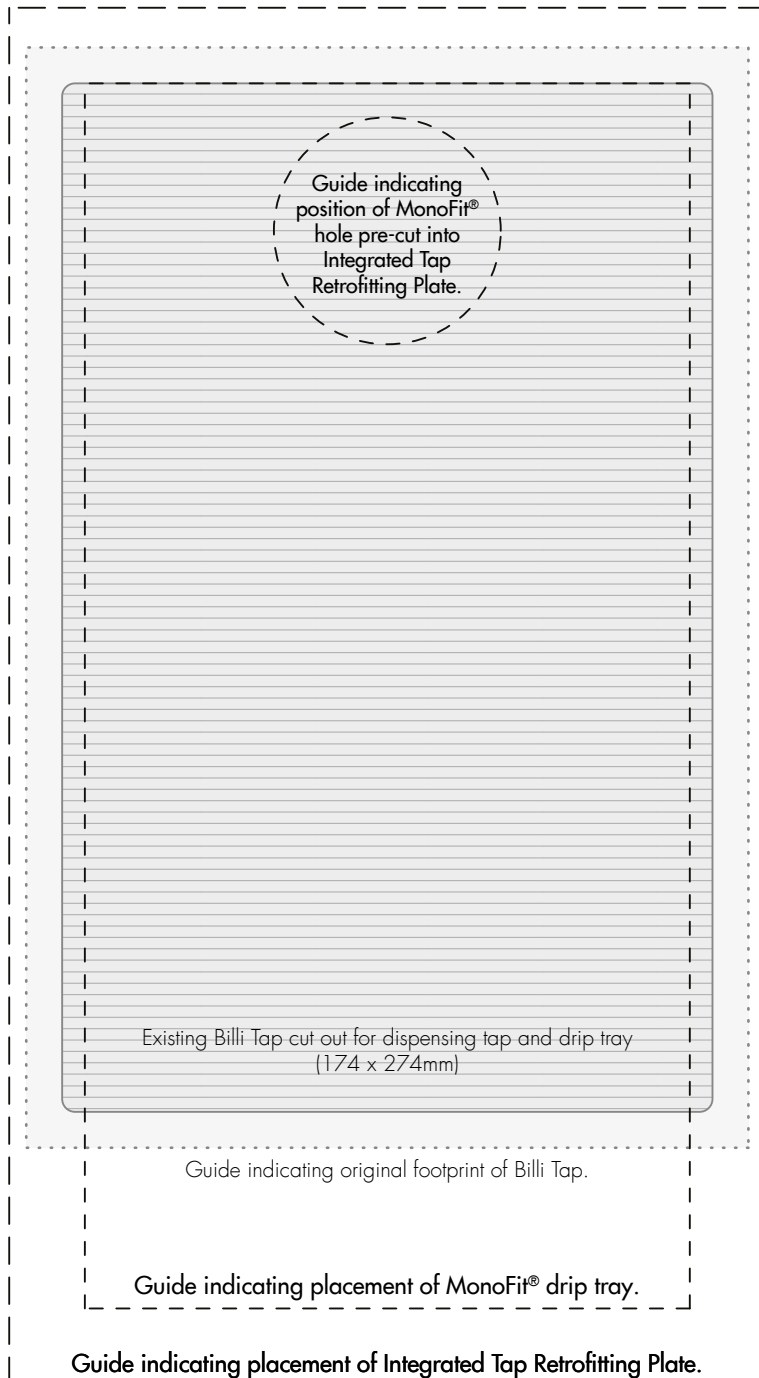


Diagram not to scale.

Note: You will require an Integrated Tap Retrofitting Plate to replace a Billi tap.



### Replacing a Billi tap with a T3 or T2 MonoFit® tap and Integrated Tap Retrofitting Plate.

A MonoFit® drip tray combined with an Integrated Tap Retrofitting plates will allow for easy installation of a T3 or T2 tap system in place of a previously installed Billi tap. The pre-existing Billi cut out should allow for the MonoFit and Retrofitting plate to be installed without further cutting required. First install the Integrated Tap Retrofitting Plate over the pre-existing hole within the counter top. The MonoFit® tray can then simply be installed over the top of the Retrofitting Plate for a finished, tidy appearance.

Before: Billi tap



After: T2 MonoFit® or T3 MonoFit® with an Integrated Tap Retrofitting Plate

